

Configuration

The following information is to be utilized when changing the operating configuration of the unit. Configuration is changed by setting one or more of the four inline switches located on the rear of the unit, under the serial number label. It is necessary to use the point of a pen or some other sharp object to change switch positions.

Switches are numbered from left to right. Off is “down” and On is “up”. **IMPORTANT:** Unit must be RESET before new switch positions are activated.